

# INSTRUCTION MANUAL

## OSCAR MX

HMV501



IMPORTANT - Keep these instructions for future reference.

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.  
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS  
STROLLER. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS  
ESSENTIAL.

Suitable from children 6 months to 20 kg (or newborn to 20kg with  
the Newborn Insert Cushion accessory).

Independently safety tested for compliance to the Australian  
and New Zealand standard AS/NZS 2088:2013 and European EN  
1888:2018

EDWARDS & CO

## **WARNINGS** Australia/NZ



### **WARNINGS!: TO AVOID INJURY OR DEATH:**

- ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THIS STROLLER.
- USE THE HARNESS AT ALL TIMES.
- USE THE STRAP TO STOP THE STROLLER ROLLING AWAY.
- DO NOT USE THE BASSINET ONCE THE CHILD CAN SIT UP UNAIDED.

## **WARNINGS** Australia/NZ



# **WARNINGS!: TO AVOID INJURY OR DEATH:**

### **When jogging:**

- Jogging with a stroller can be DANGEROUS. Faster speed increases the risk of an accident. We do not recommend jogging over 8 kph.
- Only jog with a child that can sit up unaided (usually 6 months+).
- Always have your child strapped to the seat tightly with bumper bar installed.
- Always use the stroller in forward-facing position, with the seat upright.
- Always use the front wheel locked into a fixed position.
- Always use the handle bar safety strap.
- Only jog on flat terrain, away from traffic or areas with dangerous hazards.
- Change direction with small adjustments by pressing down on the handlebar. Never turn the direction of the stroller at speed as this increases the risk of tipping.
- Do not jog with a car seat or carry cot accessory attached.

## **WARNINGS** EUROPE & EN COUNTRIES

### **WARNING!: TO AVOID INJURY OR DEATH:**

- Ensure that all the locking devices are engaged before use.
- Never leave your child unattended.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Do not let your child play with this product.
- Always use the restraint system.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- This product is not suitable for running or skating.
- It is only safe to use the main seat with a newborn baby when the seat is at full recline angle AND with the newborn liner (sold separately).

## GENERAL WARNINGS (cont.)



# **WARNING!: TO AVOID INJURY OR DEATH:**

- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 20KG.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER WITH THE CAR SEAT CAPSULE ATTACHMENT IS NOT TO EXCEED 13KG.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER WITH THE CARRY COT/BASSINET ATTACHMENT IS 9KG.**
- **THE MAXIMUM WEIGHT CAPACITY OF THE STORAGE BASKET IS 5KG.**
- **THE MAXIMUM WEIGHT CAPACITY OF THE SEAT POCKET IS 1KG.**
- **THE SEAT IS ONLY SUITABLE FROM NEWBORN WHEN USING THE NEWBORN INSERT CUSHION ACCESSORY. OTHERWISE IS IT SUITABLE FROM 6 MONTHS.**
- Do not carry extra children or bags on this stroller.
- Accessories not approved by Edwards & Co shall not be used with this stroller.
- Do not use any other mattress in the carry cot/bassinet other than those supplied by Edwards & Co.
- Do not place or attach weight on the handle or side of the stroller as it will impact the stability of the frame.
- Do not use this stroller on escalators or moving/mechanical conveyer belts.
- Always take your child out of the stroller when on stairs.
- This stroller is designed for use on flat and gentle sloping surfaces. Take care on higher sloping or uneven surfaces as there is a risk of the stroller tipping over.
- Salt water or excessive moisture may cause corrosion on the fastenings and moving parts of this stroller. Store your stroller in a sheltered dry place and avoid beach use where possible. Corrosion caused by environmental factors is not covered by the manufacturer warranty.

## GENERAL WARNINGS (cont.)



### **WARNING!: TO AVOID INJURY OR DEATH:**

- Keep away from fire and extreme heat. Do not store in areas that may get particularly hot in summer like roof space or beside shed walls.
- Do not place heavy weights on the handle of the stroller as it will impact the stability of the frame.
- The stroller is not intended to be a substitute baby cot or bed. It is only designed to enable safe transportation of children.
- To avoid serious injury, always use the safety harness when your child is in the stroller. Always adjust the straps to suit the size of your child's body and to fit it firmly. A loose restraint or harness is **DANGEROUS**.
- Never leave a harness connected when not fitted to a child in the stroller. The harness can form loops which may be a strangulation hazard.
- The buckle **SHOULD ALWAYS** be easily accessible. It is important that your child can be released quickly in the event of an emergency.
- There is a risk of fingers being jammed in moving parts when folding or unfolding the stroller. Take care of fingers and NEVER let children fold or unfold the stroller.

# STROLLER COMPONENTS

The product should come with the following:

## Main components

- Stroller frame
- Seat unit with harness and bumper bar
- Three wheels
- Sun canopy
- Storage basket



## ASSEMBLY: Wheel installation and removal

### Rear wheels: Removal

Press the release button located on the wheel hub and pull the wheel outwards.

### Rear wheels: Installation

Locate the metal rod on the wheel. Whilst pressing the wheel hub release button, insert the rod into the rear wheel housing located on the axle. The wheel has successfully installed when you hear a CLICK!

**IMPORTANT** - Once installed, pull the wheel to confirm a proper connection.

**SPECIAL NOTICE - DO NOT LEAVE THE STROLLER WHEELS TOUCHING CARPET OR SOFT FURNISHINGS FOR EXTENDED PERIODS OF TIME. RUBBER CAN TRANSFER TO SURFACES IN WARMER TEMPERATURES.**





## ASSEMBLY: Wheel installation and removal

### Front wheels: Removal

Push the button on the back of the wheel housing and pull outwards.

### Front wheels: Installation

Insert the wheel rod into the front wheel housing until you hear a CLICK!

**IMPORTANT** - Once installed, pull the wheel to confirm a proper connection.



## CARRYING THE STROLLER

We recommend lifting the stroller by grabbing the area near the fold hinge.

ALWAYS make sure the fold lock is secured before lifting or carrying the stroller.



# ASSEMBLY: Unfolding the stroller


## Unfolding:

1. Make sure the brake is engaged.
2. Stand the stroller upright.
3. Lift the fold lock located on the right hand side of the frame away from the catch clip.
4. Slowly pull the handle of the stroller upwards.
5. The stroller will unfold and **CLICK!** into place.



## ASSEMBLY: Attaching the canopy

1. Take note of the location of the dome at the end of the seat.
2. Slip the lid of the canopy underneath the seat frame.
3. Adjust the canopy hinge to 90 degrees (both sides).
4. Clip the canopy hinges to the seat frame and snap on.
5. Unzip the canopy.
6. Connect the dome on the canopy with the dome on the stroller seat.

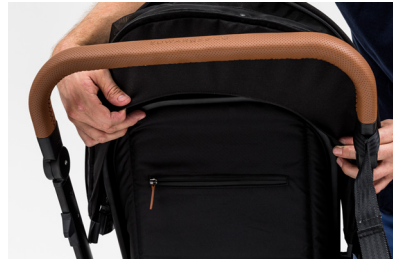

# FOLDING THE STROLLER

## Folding:

Note - the seat unit must be in forward facing position, or removed, to fold.

1. Apply the brakes.
2. Adjust the seat recline to an upright position.
3. Locate the two folding triggers. With both hands, slide the triggers towards you.
4. Push the handlebar towards the floor until the fold lock engages. The fold lock prevents the stroller from unfolding when carrying.
5. For a more compact fold, adjust the footrest.

**WARNING** - To avoid damage to the handlebar lining, take care when placing the handlebar on the ground.



# ATTACHING & REMOVING THE SEAT

## Attaching

1. To install the seat unit, insert the tongues on the seat unit into the stroller frame adapter housing. You can install the seat in forward or reverse position.

## Removing

1. There are two buttons located on the stroller frame, just underneath where the seat unit's tongue connects. Press one of the release buttons until it depresses (it will stay depressed).
2. Press the second release button on the other side until it depresses. You do not need to press each button simultaneously.
3. Lift the seat unit up as pictured.



# SEAT RECLINE

To adjust the recline, press the buttons on each side of the seat unit and raise or lower the seat to the desired position. There are three height settings.



1. Upright - suitable from 6 months +



2. Reclined - a sleeping position suitable from 6months+.



## SEAT RECLINE



3. Lie Flat- suitable from newborn **only when used in conjunction with the Newborn Insert Cushion..** See next page.

## FOOT REST

To raise or lower the leg rest, press the two buttons on both sides of the leg rest hinge and move to your desired position.





## USING THE NEWBORN INSERT CUSHION

The Newborn Insert Cushion converts the seat unit into an approved surface for newborn babies.

**The Newborn Insert Cushion should only be used with the seat unit in fully reclined position. NEVER use the liner in a semi-reclined or upright position. Do not use the cushion in the Oscar Mx without the lumbar wedge.**

To install:

1. Remove the seat unit's toddler shoulder pads and crotch pads.
2. Ensure the shoulder strap height is at it's lowest position.
3. Thread the shoulder, lumbar and crotch belts through the liner.
4. Pull the shoulder belts through the loop on the back of the head hugger and then through the shoulder pads.
5. The final installation is pictured below.

**WARNING** - This cushion is not a substitute for a bassinet or bed. NEVER leave a baby asleep in the stroller unattended.





# ATTACHING & REMOVING THE CARRY COT

## Attaching

1. Insert the carry cot's adapter tongues into the stroller frame's adapter housing. We only recommend installing the carry cot in reverse facing position (with baby looking at you).

## Removing

1. There are two buttons located on the stroller frame, just underneath where the carry cot's tongue connects. Press one of the release buttons until it depresses.
2. Press the second release button on the other side until it depresses. You do not need to press each button simultaneously.
3. Lift the carry cot up as pictured.



**IMPORTANT** - Only the Edwards & Co Carry Cot (M Series) can be connected with the Edwards & Co Oscar Mx. Do not use other brands.

**WARNING** - DO NOT USE THE CARRY COT WHEN BABY CAN SIT UP UNAIDED OR WHEN THEIR WEIGHT EXCEEDS 9KG. WHATEVER IS EARLIER.

# ATTACHING & REMOVING AVERY CAR SEAT

## Attaching

1. Insert Avery's adapter tongues into the stroller frame adapter housing. We only recommend installing the Avery car seat in reverse facing position (baby looking at you).

## Removing

1. There are two buttons located on the stroller frame, just underneath where the car seat's tongue connects. Press one of the release buttons until it depresses.
2. Press the second release button on the other side until it depresses. You do not need to press each button simultaneously.
3. Lift the car seat up as pictured.



**IMPORTANT** - Only the Edwards & Co Avery Car Seat (FA0062) can be connected with the Edwards & Co Oscar Mx.

**IMPORTANT** - The maximum weight capacity of the car seat is 13kg.

**IMPORTANT** - The car seat is not a substitute for a bassinet or bed. Do not leave your child unattended in the car seat.

# ATTACHING A MAXI-COSI STYLE CAR SEAT

## Attaching the adapters

1. Locate your Maxi-Cosi/Universal Car Seat adapter (sold separately).
2. Identify the Left and Right adapter (stamped on the underside with either L or R). Left side = Left side when standing at the handlebar. Right side = Right side when standing at the handlebar.
3. Connect the appropriate adapter to the stroller's seat housing.

## Removing the adapters

1. There are two buttons located on the stroller frame, just underneath where the adapter connects. Press one of the release buttons until it depresses. Lift out the adapter.
2. Press the second release button on the other side until it depresses. Lift up the adapter.

## Attaching & removing the car seat

1. To attach the car seat, place the car seat's adapter housing on top of the adapters until you hear a CLICK!
2. To remove the car seat, simultaneously release the buttons on the side of the car seat shell and lift upwards (for more information please refer to your car seat's instruction manual).



# BUMPER BAR

## Attaching

1. Insert the tongue on the bumper bar into the housing on the seat until it clicks. Pull the bar to ensure it's connection.

## Removing

2. Press the button underneath the bumper bar and pull out simultaneously.



# HANDLEBAR HEIGHT ADJUSTMENT

Press the buttons on the outside of the handlebar and raise or lower as required.



# BUCKLE

## Locking the buckle

1. Insert each tongue into the buckle until you hear a **CLICK!**
2. Repeat for each tongue x 4.

## Unlocking the buckle

1. Press the button at the centre of the buckle.



# SHOULDER STRAP HEIGHT

There are three height slot positions for the shoulder straps. As your child grows, you will need to move the straps according to your child's height. The correct height is where the straps **are about level or just above your child's shoulders**. The picture on the next page demonstrates the correct installation.

**To adjust the height** - find the harness loops inside behind the seat. Remove and insert the hooks into the loops.





# TIGHTENING & LOOSENING STRAPS

To tighten and loosen the harness, pull the straps through the toggle on the shoulder strap and/or the crotch strap as pictured.

The straps should be firm but not too tight around your child. You should be able to fit two fingers in between the harness and your child.



## **WARNING!**

Never leave a harness connected when not fitted to a child in the stroller. The harness can form loops which may be a strangulation hazard.

# PARKING BRAKE & SWIVEL LOCK

## **Parking brake:**

To **engage** the brake, depress the rear of the red brake pedal downwards. **Give the stroller a small jiggle to ensure it engages.** This brake locks both rear wheels.

To **release** the brake, repeat by pressing the pedal downwards.



## **Front wheel swivel lock:**

The swivel lock is located on the front wheel housing.

To **lock** the swivel, depress the slider downwards. Swivel the front wheel until you hear a click and the wheel locks into position.

To **free** the wheel, lift the slider upwards.





# CARE & MAINTENANCE

## Important information

- We recommend storing your stroller indoors to avoid corrosion.
  - We recommend regular inspection and maintenance of locking devices and security of essential components. **Please follow our Servicing Guide (next page)**
  - Regularly check all parts for wear and tear.
  - To clean the lining and/or sun canopy, we recommend sponging with a damp cloth that has been soaked in a small amount of mild detergent (such as laundry liquid). DO NOT SOAK.
  - **NEVER** tumble dry.
  - **NEVER** machine wash.
  - **NEVER** clean with abrasive, ammonia-based, bleach-based or spirit-based cleaners.
  - If the wheels become damaged or worn, discontinue use and replace.
  - Avoid sun exposure for long periods to prevent fading and damage to the fabric.
  - We do not recommend using this product on the beach. Salt and moisture can be extremely damaging to the moving parts of this stroller. Even salty atmospheric conditions can enter into the mechanisms of the product. If you use the product near salt water, please refer to our Servicing Guide found next page.
- Corrosion is not covered under our warranty.**
- **NEVER** wring any fabrics.
  - Dry thoroughly before storage.
  - Store in a well-ventilated area, away from direct sunlight which could damage or fade your car seat.
  - Store in a safe place when it is not being used. Avoid placing heavy objects on top of it.
  - **NEVER** allow the seat to come into contact with corrosive substances such as battery acid or petroleum products.

# SERVICING GUIDE

## Just like your car, regular service extends the life of your Edwards & Co stroller.

Below are some helpful tips to keep your wheels smooth and enjoyable to use. We recommend servicing your stroller at least every 6 months and an inspection at least once a month.

### Here's how to service your stroller at home:

- **Inspect all the rivets and screws** that connect your stroller together. They should be clean, tight and secure.
- **Remove the wheels** (back and front) and wipe them clean with a clean rag to remove any dirt, sand or other debris. Wipe out the wheel housing. Rear wheels only: Spray the wheel pins with some WD-40 to keep the wheel release running smoothly.
- **Make sure the fold joints are free of dirt and debris.** Wipe clean with a damp cloth. We suggest cleaning the fold joints when the stroller frame is folded. Apply some WD-40 or Silicone spray (available at Bunnings, Mitre 10 or your local supermarket) to the moving hinges.
- **To prevent the metal components from rusting,** wipe down your stroller frame with a damp clean rag after beach or rain use, especially when used in windy & exposed areas. Always store in a dry place. Do not store your stroller in a damp environment that is not well insulated (such as an unfinished basement or outdoor shed).
- **If you live or use the stroller within 2kms of the beach or sea,** every 2 months liberally spray a rag with some WD-40 and wipe it over the rivets and screws to add an additional coating layer against corrosion.  
**FINE SAND CAN INTERFERE WITH THE BRAKES: AVOID WHERE POSSIBLE.**
- **If you do find some corrosion forming on the rivets or screws,** you can wipe it clean with a damp cloth. Dry it overnight, then liberally apply a layer of WD-40 as above. Repeat monthly.

# WARRANTY

All Edwards & Co products are guaranteed for two years from the date of purchase against defects in material and workmanship.

If we determine that the product has a manufacturing fault, we will repair or replace it free of charge to you. The decision to repair or replace is solely at the discretion of Edwards & Co. Proof of purchase must be provided.

The warranty is “return to base” and not a free in-home service. This means the customer is responsible for any inwards freight charge to return the product to an Edwards & Co representative for warranty or service.

Our warranty excludes claims resulting from misuse, abnormal use, overloading, general wear and tear, child outgrowing the product, not following instructions, transportation damage (including airline or freight damage), poorly maintained product, dropped goods, negligence, second-hand product, modified product, colour fading, over inflation, mould, damage to handle foam in use or fabric cuts and tears. Our warranty also does not cover tyre punctures or corrosion to frames or fasteners as a result of atmospheric or environmental conditions.

Any replacement will not give the right for the warranty period to be extended.

Edwards & Co does not cover warranty if the product has been purchased second hand or from an unauthorised reseller.

For the complete terms and conditions of our warranty, please visit our website - **[edwardsandcobaby.com/warranty](https://edwardsandcobaby.com/warranty)**

Edwards & Co  
52 Anvil Road  
Silverdale 0932  
NEW ZEALAND

e: [hello@edwardsandcobaby.com](mailto:hello@edwardsandcobaby.com)  
p: 0800 ED AND CO  
(0800 33 263 26) or +64 21 661 171

EDWARDS & CO